Information for the installer

## Installation instructions:

Multi-column radiators are the best choice. The most modern technological solutions and care in production guarantee product excellence, both in finishing and durability. Our multi-column radiators have an extremely low number of welding issues compared to our competitors. To safeguard your radiator and your heating system we strongly recommend the following after installation:

- Carefully wash the heating system to remove dirt, mud, welding residue and any other possible sources of damage or blockages
- Perform chemical treatments required by law and follow the outlined installation process.
   Important:
- Please avoid any cleaning products which may harm the silicon gaskets used in the radiator
- The heating system should be filled with the valves open and taking care to increase the pressure gradually, avoiding sudden pressure jumps

Do not connect the radiator either to the sanitary system or to systems with open expansion vessel.

General information: The installation and commissioning of the system should comply with BS EN 14336:2004. On completion of the installation, the system should be properly flushed and filled in accordance with the British Code of Practice for the Treatment of Water in Domestic Hot Water Central Heating Systems (BS 7593:2006). We strongly recommend the use of a corrosion inhibitor. Failure to comply with these standards might invalidate the manufacturer's warranty.

All dimensions are in mm.

### Merriott UK & Ireland

Purmo Group (UK) Ltd, Eastern Avenue, Team Valley, Gateshead, Tyne & Wear, NE11 0PG Tel: 0330 0415 472


sales@merriottuk.com sales@merriott.ie


www.merriottuk.com/www.merriott.ie
Follow us on @merriottuk and in

 
## Multicolumn Radiator

 
2, 3, 4, 5 & 6 column

 
Inlet on top (1 or 3), outlet on bottom (2 or 4). One-pipe connection (2 or 4)

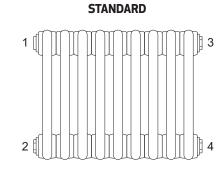


 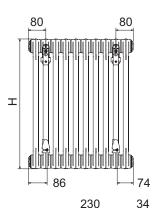


 


 


 


 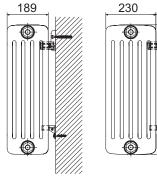















#### WITH VALVE

  Valve on top






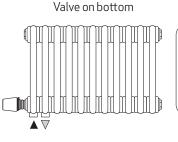

## VALVE PRE-SETTING

Select the pre-setting value from the chart, in function of the capacity and the pressure drop in the radiator.

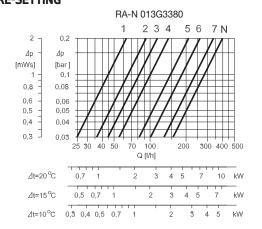


Information for the installer


# Multicolumn Radiator


2, 3, 4, 5 & 6 column

## **SPECIAL CONFIGURATION**

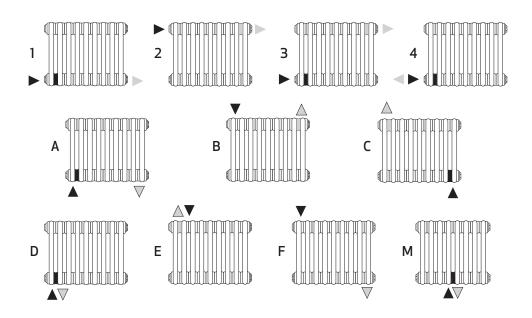

### **HANGING BRACKET**

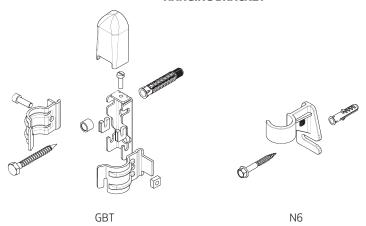

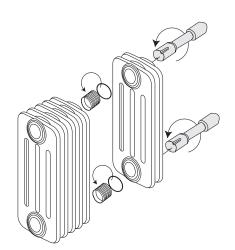

## **JOINING RADIATORS**

On special orders, radiators may be joined as shown in the below image. For further information on joined radiators, please refer to the Merriott Multi-Column brochure.



